

DB 8

:

*

*

95dB

baracket

*

	PROYU
	PY-JL188-8
	200x200x65mm
	-10 ° C ~ 50 ° C
	10% ~ 93%
	24 VDC (16V ~ 30VDC)
	70 mA @ 24 VDC
	95dB





ALARM BELL

Install Item

1. Before install please detail reading the specification.
2. Install the bell according to fire standard height.
 - Firstly open the bell cover screw, then screw the bell cover, according to the direction of the figure 1.
3. Firstly put the plastic base to fix on the bell, pay attention the strike pin to enter same, see figure 2.
4. Switch on**according to red line, the type of the stack line with on***, switch on DC24V power.
5. Finally installed bell cover, and tighten up a screw to fix.